

©1995 FUUKI

取扱説明書

OPERATION MANUAL

 **Fuuki Co.,Ltd.**

□ 設置の概要 (SETUP OVERVIEW)

○ 基盤コネクタ (EDGE CONNECTOR)

JAMMA規格、準拠
(JAMMA STANDARD COMPATIBLE)

○ CRTモニタ (CRT)

ヨコ画面
(HORIZONTAL DISPLAY)


○ コントロールパネルの配置 (CONTROL PANEL CONFIGURATION)

横並び二人同時プレイ型
(SIMULTANEOUS GAME PLAY)

4方向ジョイスティック



○ PCボードの説明 (EXPLANATION OF P.C.B.)

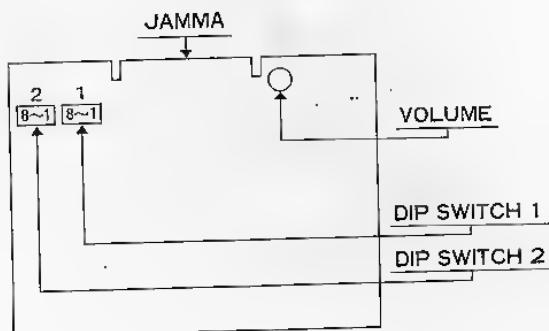

○ JAMMA規格 (JAMMA STANDARD)

半田面 (SOLDER SIDE)		部品面 (PARTS SIDE)
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
N.C.	E 5	N.C.
+12V	F 6	+12V
誤挿入防止キー (SAFETY KEY)	H 7	誤挿入防止キー (SAFETY KEY)
COIN COUNTER2	J 8	COIN COUNTER1
N.C.	K 9	N.C.
SPEAKER (-)	L 10	SPEAKER (+)
N.C.	M 11	N.C.
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SW	R 14	VIDEO GND
N.C.	S 15	N.C.
COIN SW2	T 16	COIN SW1
START SW2	U 17	START SW1
2P UP	V 18	1P UP
2P DOWN	W 19	1P DOWN
2P LEFT	X 20	1P LEFT
2P RIGHT	Y 21	1P RIGHT
2P BUTTON1	Z 22	1P BUTTON1
N.C.	a 23	N.C.
N.C.	b 24	N.C.
N.C.	c 25	N.C.
N.C.	d 26	N.C.
GND	e 27	GND
GND	f 28	GND

DIP SWITCH 1 SETTINGS

項目 ITEM	内容 DESCRIPTION	1	2	3	4	5	6	7	8
テストモード TEST MODE	テスト TEST	ON							
	ゲーム GAME	OFF							
効果音 DEMO SOUND	無 OFF		ON						
	有 ON		OFF						
難易度 DIFFICULTY	EASY			ON	ON				
	HARD			ON	OFF				
	VERY HARD			OFF	ON				
	NORMAL			OFF	OFF				
言語 LANGUAGE	韓国語 KOREAN					ON	ON		
	英語 ENGLISH					ON	OFF		
	中国語 CHINESE					OFF	ON		
	日本語 JAPANESE					OFF	OFF		
プレイヤー数 LIFE	2							ON	ON
	4							ON	OFF
	5							OFF	ON
	3							OFF	OFF

DIP SWITCH 2 SETTINGS

項目 ITEM	内容 DESCRIPTION	1	2	3	4	5	6	7	8
画面反転 MONITOR FLIP	反転 FLIP	ON							
	通常 NORMAL	OFF							
コインの設定1 COIN 1 SWITCH SETTINGS	FREE PLAY			ON	ON	ON			
	1COIN 4CREDIT			ON	ON	OFF			
	1COIN 3CREDIT			ON	OFF	ON			
	1COIN 2CREDIT			ON	OFF	OFF			
	4COIN 1CREDIT			OFF	ON	ON			
	3COIN 1CREDIT			OFF	ON	OFF			
	2COIN 1CREDIT			OFF	OFF	ON			
	1COIN 1CREDIT			OFF	OFF	OFF			
コインの設定2 COIN 2 SWITCH SETTINGS	FREE PLAY					ON	ON	ON	
	1COIN 4CREDIT					ON	ON	OFF	
	1COIN 3CREDIT					ON	OFF	ON	
	1COIN 2CREDIT					ON	OFF	OFF	
	4COIN 1CREDIT					OFF	ON	ON	
	3COIN 1CREDIT					OFF	ON	OFF	
	2COIN 1CREDIT					OFF	OFF	ON	
	1COIN 1CREDIT					OFF	OFF	OFF	



この基板についてのお問い合わせは

If you have any questions regarding this P.C.B. please contact.

〒607 京都市山科区西野広見町32-2 リネンビル3F

TEL (075) 595-1136㈹ FAX (075) 595-1139

3F Rinen Bld. 32-2, Hiromi-cho, Nishino, Yamashina, Kyoto, Japan
PHONE: 81-75-595-1136 FAX: 81-75-595-1139